

## The Standard of Quality Since 1890

104 South 8th Avenue Marshalltown, IA 50158

20102 RFD704984

Phone: (641) 753-5999 Fax: (641) 753-6341

10 Gallon Stationary Melter Parts

www.MARSHALLTOWN.com

## Replacement Parts for Direct Fire Melters

20102	RED/04964	10 Gallon Stationary Meiter Parts
26590 20092 20099 20097 20101 20098	RED704980* RED704973* RED704981 RED704978 RED704983 RED704979*	Molasses Valve Complete torch Kit Assembly (hose, regulator, gauge, torch head) LPG regulator <b>only</b> (no gauge or hose) Gauge for LPG regulator 6' LPG replacement hose Temperature gauge
20103	RED704985	30 Gallon Stationary Melter Parts
26590 20092 20099 20097 20101 20098	RED704980* RED704973* RED704981 RED704978 RED704983 RED704979*	Molasses Valve Complete torch Kit Assembly (hose, regulator, gauge, torch head) LPG regulator <b>only</b> (no gauge or hose) Gauge for LPG regulator 6' LPG replacement hose Temperature gauge
20105	RED704987	10 Gallon Portable Melter Parts
20092 20099 20097 20101 20098 20095 20094 20093 20096 20108	RED704973* RED704981 RED704978 RED704983 RED704979* RED704976* RED704975 RED704974 RED704977 RED714194	Complete torch Kit Assembly (hose, regulator, gauge, torch head) LPG regulator only (no gauge or hose) Gauge for LPG regulator 6' LPG replacement hose Temperature gauge Inner control valve Steel back wheels (set of 2) Front swivel wheel 3" replacement shoe 2" replacement shoe

Other parts available upon request

<sup>\*</sup>Recommended spare parts to stock

## Safety Instructions MARSHALLTOWN'S Melter Applicators

## **Read Before Operating**

**IMPORTANT:** Safety precautions must be observed while using all MARSHALLTOWN equipment. Failure to follow instructions can result in personal injury or damage to the equipment. Reasonable care must be used at all times.

Keep applicator at least six feet from combustible material. Remove product to be applied from the box and load it into the kettle. If product has plastic bag, it will melt into heated product when stirred.

Remove torch from kettle before lighting. **Warning!** Never allow torch to fire in an empty kettle. Turn regulator to 8 PSI to light torch. After lighting torch, insert into the kettle heating chamber on low pressure without smothering out the flame. Inserting torch when flame is running full will likely smother flame before the updraft begins. If that happens, turn off regulator, remove torch from chamber and wait five minutes before re-lighting. This will allow for any unburned gas to vent, making it safe to re-ignite the torch.

Position the torch in the center of the burner chamber, making sure to remove any obstacles or obstructions. As the torch starts to heat the chamber, the updraft will allow you to increase the flame intensity to the desired level.

Heat penetrates the block of material slowly. The MARSHALLTOWN applicator is designed to draw off liquid for use as soon as the pouring temperatures are reached. (See manufacturer's recommendations for material you are using). For the best results, material should be used as it liquefies. Frequent stirring will speed melting rate. High flame or extended heating of some materials over 400 degrees F can adversely affect the elastomeric polymers.

**Warning!** Never allow material to exceed 400 degrees F. Flashing can occur when the temperature exceeds 400 degrees F. Regular operation temperature can be achieved with half the normal flame. If material becomes too hot, remove the torch immediately and allow cooling to a safe temperature. If flashing does occur, close cover if open, turn off gas, remove torch from chamber and allow cooling.

**Warning!** Never use water on a hot applicator fire. Only use an approved fire extinguisher rated for oil fires. You should have one of these available at all times when using the applicator.

There is no need to drain the kettle at the end of the day, but it is easier to start the next day with minimal left over material. **Warning!** Never allow torch to fire in an empty kettle.

If the vent holes are covered while the torch is operating, the updraft will be blocked, extinguishing the flame. Cover the applicator when not in use to prevent water from collecting in the pan.

After each use inspect hose, regulator and torch for unusual wear, cracks and or blockages. Repair and/or replace as needed.

MARSHALLTOWN Company warrants only that this product, at the time of delivery, conforms to MARSHALLTOWN specifications. All other warranties expressed or implied are excluded and without limitation on the foregoing. All implied warranties of merchantability and fitness purpose are excluded. Remedies against MARSHALLTOWN Company for breach of the exclusive warranty or any other defect or deficiency in this product for its intended use regardless of the theory of claim or action, is limited to replacing non-conforming product at MARSHALLTOWN'S expense or refund of full purchase price. All claims for breach of the exclusive warranty or defective product must be made within thirty days of date of purchase. All special consequential and incidental damages including those for lost profits are hereby excluded. This limited warranty may not be modified or amended except in writing by MARSHALLTOWN Company.