
Simple 3-Step Process to professional looking stair treads:

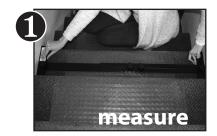

Place Stair Step Scribe 2[™] on stair tread, with pointed ends of guides facing the riser. Loosen all four knobs and extend the Stair Step Scribe 2[™]. Press the guides firmly against the edges of the step with the points touching the riser, then tighten all four knobs.



Lift the Stair Step Scribe 2[™] off the step and set it on the board to be cut. Align the points of the guides with one edge of the board. Holding the Stair Step Scribe 2[™] firmly in place, draw a line on each end of the Stair Step Scribe 2[™] along the sides of the guides.



Cut board to lines. We recommend using the double-cut method on the Magnum Shear™.

Fit your board on the stair tread and see the fantastic results of the Stair Step Scribe 2™.





www.BulletTools.com 800-406-8998